


Pre-Terminated Blown Fibre

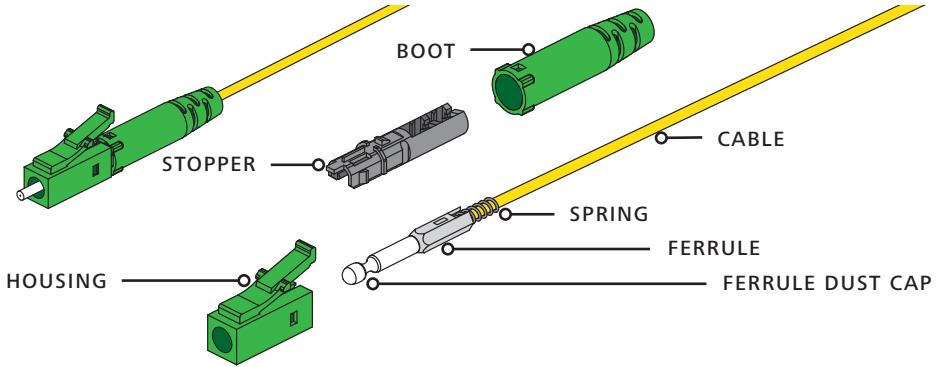


Caution:
Laser
Do not look
into beam.




**DO NOT TOUCH THE FIBRE END OR
LOOK INTO BEAM.**

1

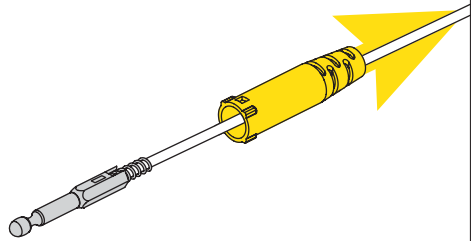


Insert the **cable** through the **boot** .

2

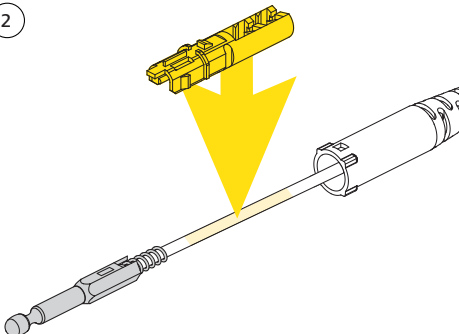


Position the **stopper** onto the **cable** .

3

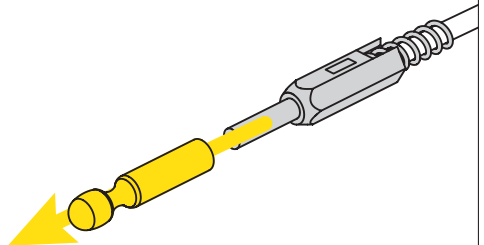


Remove **ferrule duct cap** .

4

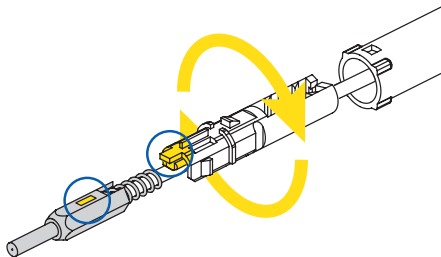


Align the key on the **stopper** to the key on the **ferrule**.

5

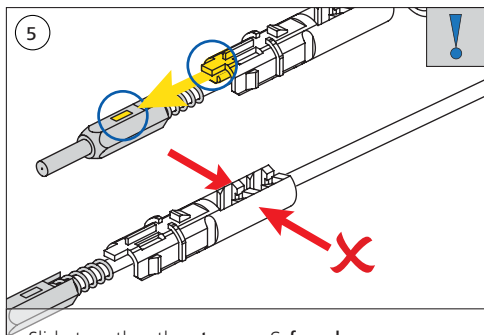


Slide together the **stopper** & ferrule.
DO NOT SQUEEZE THE CLAMPING AREA.
It may restrict movement or damage the cable.

6

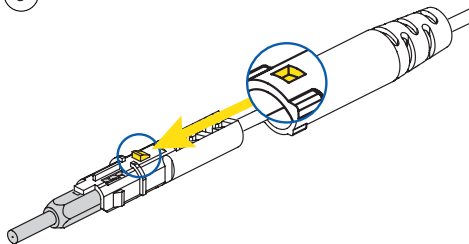


Align tab on the **stopper** & the slot on the **boot**.
Slide **boot** onto **stopper**.

7

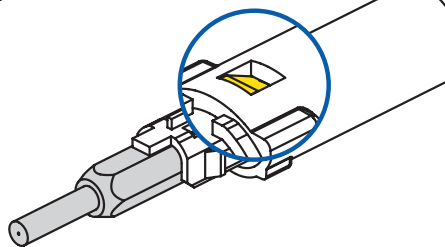


ENSURE STOPPER IS VISIBLE THROUGH SLOT.

8

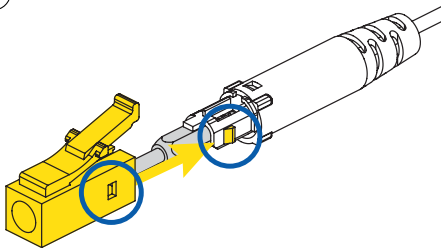

Align latch on **housing** to the slot on the **stopper**. Slide **housing** onto **stopper**.

9

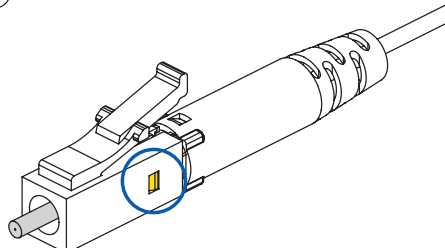

ENSURE STOPPER IS VISIBLE THROUGH SLOT.

HellermannTyton



HellermannTyton Data Ltd – UK
Tel: +44 (0) 1604 706633
www.htdata.co.uk